


Your First Source  
For RV Chassis Parts

**TVCK-101**  
**Thermo Valve Conversion kit**  
**Installation instructions**

- 1.) Remove existing FDCA Control Unit, note which hose is identified as "T" and "P".
- 2.) Install supplied weld flange, to be welded in place.  
(see figure)

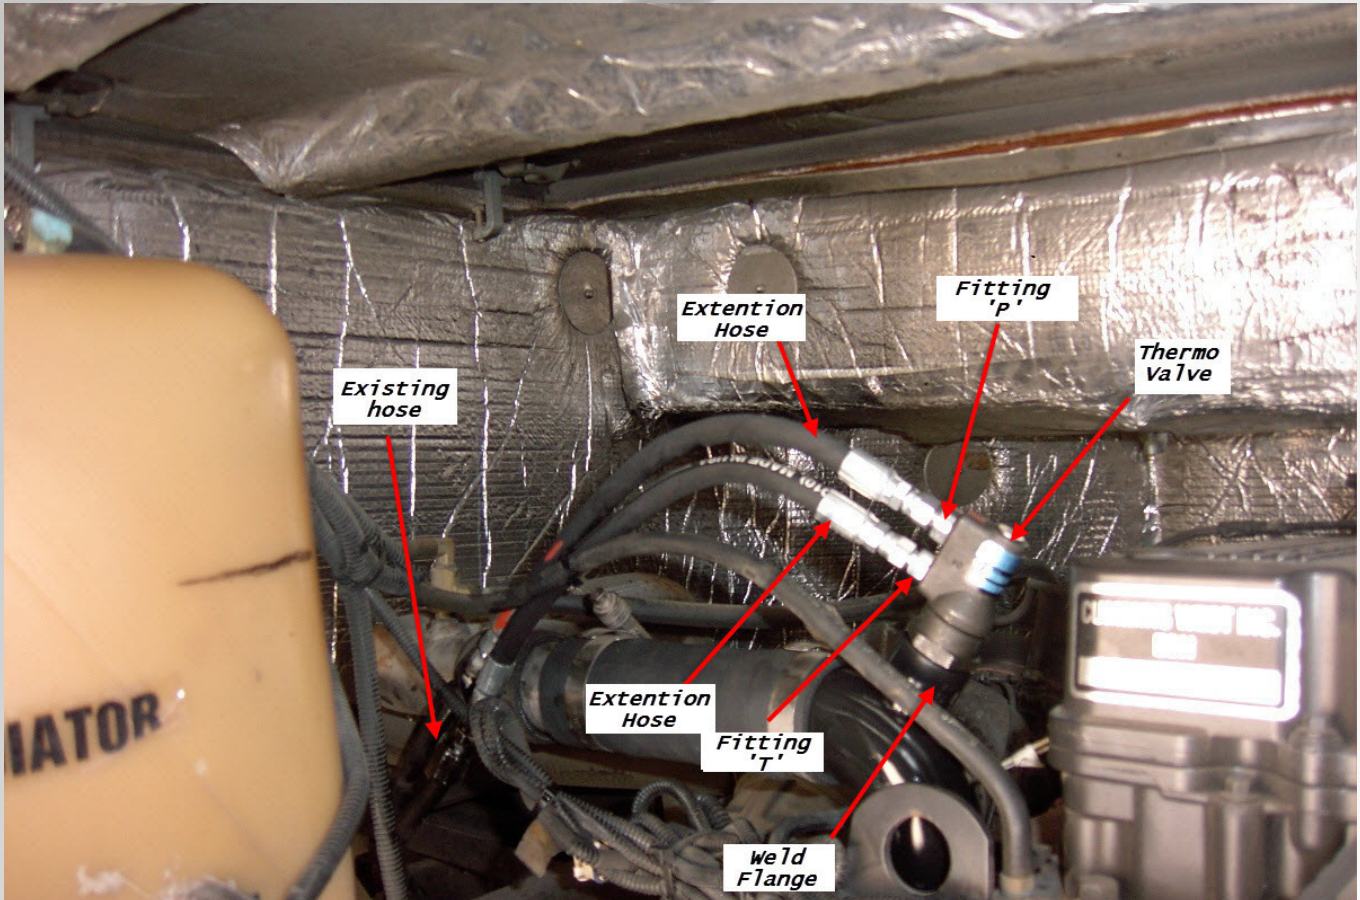

- 3.) Install supplied Extension hoses, to existing hoses.
- 4.) Install Supplied Fittings, into Thermo Valve.
- 5.) Install Supplied Thermo Valve into weld Flange.
- 6.) Install Extension hoses, to Thermo Valve, noting that the Previous hose designations of "T" and "P" are in place.
- 7.) Torque all fittings to specification, start engine, and Inspect for leaks.

\*Note: the picture depicts cummins application, cat may be slightly different. weld in flange can be installed anywhere in the upper pipe.

**Drive Your Dream In Comfort**